
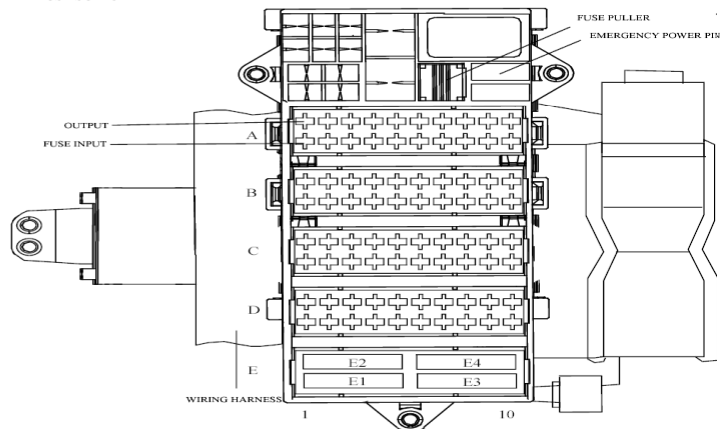


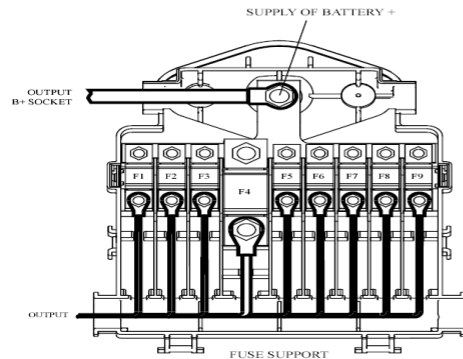

FUSES	
COLOUR	VALUE
LIGHT BROWN	3.0 A
BROWN	7.5 A
BLUE	15 A
WHITE	25 A
GREEN	30 A
ORANGE	40 A

CURRENT DISTRIBUTOR

FUSE		DESIGNATION, FUNCTION
NUMBER	VALUE	
F1	80 A	FUSE HOLDER A F1-F5
F2	80 A	FUSE HOLDER B F10
		CU ELECTRICAL SYSTEM EXTENT
		SEAT HEATER
F3	70 A	FUSE HOLDER A F7-8
		CU FRONT EXTENT
		HIGH BEAM, RIGHT
		LOW BEAM, RIGHT
		TURN SIGNAL, LEFT
F4	150 A	FUSE HOLDER A F9-10
		FUSE HOLDER D F1 - F3
		FUSE HOLDER E F1 - F3
F5	50 A	CU PSM EXTENT
		ENGINE RELAY
F6	80 A	FUSE HOLDER B F1 - F7
		RELAY, HEATER
		RELAY RL 15 LOADS
		EMERGENCY POWER RELAY
F7	80 A	FUSE HOLDER C F9-10
		DME RELAY TERMINAL 87
		TERM. 86S
F8	70 A	FUSE HOLDER A F6
		CU ELECTRICAL SYSTEM INTERIOR LIGHT
		CU FRONT EXTENT
		HIGH BEAM, LEFT
		LOW BEAM, LEFT
		TURN SIGNAL, RIGHT
F9	80 A	FUSE HOLDER E F4
		CU FRONT EXTENT
		FRONT FOG LIGHT
		SIDE MARKER LIGHT, LEFT
		SIDE MARKER, SIDE TURN SIGNAL, LEFT
		TWO-TONE HORNS

FUSE HOLDER IN LUGGAGE COMPARTMENT, RIGHT

FUSE		DESIGNATION, FUNCTION
NUMBER	VALUE	
MIDI FUSE	80 A	CU COOLANT FAN
		CU ELECTRICAL SYSTEM EXTENT
		WINDSCREEN WIPER MOTOR
		WINDSCREEN WASHER FLUID PUMP

FUSE HOLDER A

FUSE	
NUMBER	VALUE
F1	30 A
F2	15 A
F3	15 A
F4	30 A
F5	15 A
F6	15 A
F7	15 A
F8	7.5 A
F9	25 A
F10	15 A

FUSE HOLDER B

FUSE	
NUMBER	VALUE
F1	15 A
F2	7.5 A
F3	15 A
F4	25 A
F5	7.5 A
F6	7.5 A
F7	7.5 A
F8	7.5 A
F9	7.5 A
F10	30 A

IN, FUNCTION
CONTROL UNIT, POWER WINDOWS
CONTROL UNIT, CENTRAL LOCKING
STORS
4 CONTROL UNIT, POWER WINDOWS
4 CONTROL UNIT, CENTRAL LOCKING
IFT SIDE
QHT SIDE
IT FOOTWELL
IT STORAGE BIN
TER IN CENTRE CONSOLE

IN, FUNCTION
IT CLUSTER
2 PLUG SOCKET
RECOGNITION
NSOR
STEERING COLUMN SWITCH
MORY ELECTRONICS
IN
ING
N SENSOR
IMORY ELECTRONICS
WASHER RELAY
CAL SYSTEM TANK COVER
SIST
MIT SELECTOR LEVER
IONIC
IONING COMPRESSOR

FUSE HOLDER C

TERM 15	FUSE		DESIGNATION, FUNCTION
	NUMBER	VALUE	
	F1	7.5 A	CONTROL UNIT ALL-WHEEL DRIVE
	F2	7.5 A	DIAGNOSTIC PLUG SOCKET
			REFRIGERANT PRESSURE SENSOR
			CLUTCH SWITCH
			HEATED SPRAY JET
			CU PASM
			COMFORT SEAT, LEFT AND RIGHT
	F3	10 A	LIGHT SWITCH
			CU FRONT
	F4	10 A	CU CORNER SENSITIVE HEADLIGHTS
	F5	10 A	STOP LIGHT SWITCH
	F5	15 A	CONTROL UNIT SELECTOR LEVER
			CU PDK
	F6	15 A	BRIDGE PLUG TERM. 15 EXTENT
			REAR WINDOW WIPER
			CU CORNER SENSITIVE HEADLIGHTS
			ANTI-DAZZLE INTERIOR MIRROR
			HOMELINK TRANSMITTER
	F7	7.5 A	COMBINED STEERING COLUMN SWITCH
	F8	10 A	CU PSM
			BRUTTON, PORSCHE STABILITY MANAGEMENT ON/OFF
	F9	15 A	RAVE-OF-TURN SENSOR
			CU PASM
	F10	25 A	CU PSM EXTENT
			VALVE RELAY

FUSE HOLDER E

	FUSE		DESIGNATION, FUNCTION
	NUMBER	VALUE	
	F1	30 A	ELECTRIC SEAT ADJUSTMENT, LEFT
			SEAT MEMORY, LEFT
	F2	30 A	ELECTRIC SEAT ADJUSTMENT, RIGHT
			SEAT MEMORY, RIGHT
	F3	30 A	POWER WINDOW MOTOR REAR
			CU ELECTRIC CONVERTIBLE TOP
			SLIDING ROOF
	F4	30 A	AMPLIFIER, ASK
			AMPLIFIER, BONE
			SUBWOOFER

FUSE HOLDER D

TERM 16	FUSE		DESIGNATION, FUNCTION
	NUMBER	VALUE	
	F1	25 A	RELAY, FUEL PUMP 2
	F2	—	FREE
	F3	7.5 A	CU DME TERM. 30
	F4	20 A	TERM. 87 DME SUPPLY
	F5	25 A	QUANTITY CONTROL VALVE
			SHIFT VALVE, RESONANCE FLAP
			CAMSHAFT ADJUSTER 1
			CAMSHAFT ADJUSTER 2
			VALVE LIFT CONTROL, CYLINDERS 1-3
			VALVE LIFT CONTROL, CYLINDERS 4-6
	F6	25 A	HEATER OXYGEN SENSOR, AHEAD CAT. CONV.
			HEATER OXYGEN SENSOR, BEH. CAT. CONV.
	F7	15 A	IGNITION COILS
	F8	7.5 A	SPORT EXHAUST VALVE
			COOLING WATER SHUTOFF VALVE
			AIR CLEANER FLAP
			IFM
			CAMSHAFT SENSOR 1
	F9	10 A	CAMSHAFT SENSOR 2
			TANK VENT VALVE
			OIL LEVEL SENSOR
			TANK LEAKAGE DIAGNOSTICS MODULE
			TELEVISION TUBES
	F10	15 A	TELEPHONE TERMINATION, MOBILE PHONE
			TELEPHONE HANDSET
			PCMS
			CDR30
			JAPAN NAVIGATION SYSTEM
			CHINA NAVIGATION
			CAN ADAPTER

FUSE HOLDER F

	FUSE		DESIGNATION, FUNCTION
	NUMBER	VALUE	
	F1	10 A	ENGINE COMPARTMENT PURGE FAN
	F2	3 A	ENGINE COMPARTMENT PURGE FAN
	F3	—	FREE

FUSE HOLDER ON REAR RELAY CARRIER

FUSE NO.	FUSE VALUE	DESIGNATION, FUNCTION
F1	40 A	SECONDARY AIR PUMP
F2	40 A	HEATED REAR WINDOW
F3	40 A	FREE